



PRO5000

DISTANCE YOU CAN TRUST.

Visit motocaddy.com/pro5000 to:

- Download product instructions
- Register your product warranty
- Join our community for latest news
- Follow Motocaddy on social media



Scan the QR code with a QR code reader to open the link in your mobile browser



PRO5000 Quick Start Guide

Mode Button

RECHARGEABLE BATTERY

Insert USB-C cable (included) into
Battery Charging Port and power on.

 Charging  Fully Charged

Power / Measure Button

Eye Piece / Focal Adjustment

Slope Switch ( On)

Battery Charging Port



Power On - Press the **POWER** button to activate the OLED display. The unit will automatically power off after 20 seconds of inactivity.

Measuring Distances - Press the **MEASURE** button. Once a target has been acquired, the unit will vibrate and green lines will flash.

Target Scanning - Hold the **MEASURE** button. Distance readings will automatically change as different targets are acquired.

PinLock - Press the **MODE** button to enable/disable PinLock. PinLock filters background objects to make it easier to hit the pin.

Units of Measure - Hold the **MODE** button for 3 seconds to switch between Yards (Y) and Metres (M).

OLED Brightness - While holding the **POWER** button, press the **MODE** button to change the brightness level or enable Auto Brightness (A).

Low Battery Alert

Actual Distance (M/Y)

PinLock Enabled

OLED Brightness

Slope Adjustment (+/-)

Slope Adjusted Distance

