





PRO 3000 Quick Start Guide

Mode Button / Modes:

1.  Scan Mode (Slope On)
2.  PinLock Mode (Slope On)
3.  Scan Mode (Slope Off)
4.  PinLock Mode (Slope Off)



Power / Measure Button

Eye Piece / Focal Adjustment

Battery Compartment


Distance (Main)

Target Display


Mode Indicator

Slope Information

Battery Level

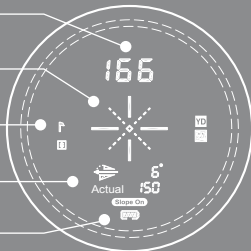

Power On - Press the **POWER** button to activate the LCD screen

Modes - Press the **MODE** button to enable/disable PinLock  and Slope compensation features. The LCD display will clearly indicate when Slope compensation is enabled **Slope On**

Measuring Distances - Press and hold the **POWER/MEASURE** button. Diagonal crosshairs will flash when a target has been acquired

PinLock Mode - PinLock filters background objects to make it easier to hit the pin. Once a target has been acquired, the unit will vibrate

Units of Measure - Press and hold the **MODE** button for 3 seconds to switch between Yards  and Metres 