

ORIGINAL VERSION



**M-TECH GPS Electric Trolley
Instruction Manual**

EN

REGISTER ONLINE

www.motocaddy.com/warranty



IMPORTANT : Product activation required before first use.
Scan the QR code for full instructions and to ensure that your trolley software remains up to date and optimised.



Distance Measurement Device (DMD) features are legal to use when local USGA and R&A rule 4.3 is in effect. Always check local and competition rules prior to commencing play



Visit www.motocaddy.com/instructions for other Motocaddy instructions including translations

SOFTWARE UPDATES / SERIAL NUMBER LOCATION

IMPORTANT - Software Updates

This trolley has been developed to include WIFI powered, Over the Air (OTA) course and system updates. It is recommended that you always use the latest firmware version to enable you to take advantage of new features and system improvements. You can register your email address to join our dedicated product mailing list by scanning the QR code or visiting www.motocaddy.com/support/m-tech.



This Motocaddy electric trolley is designed for the transportation of golf bags and clubs contained within.

Locating your Serial Number

The serial number is located within the battery tray (fig.1). This number is required when registering your warranty online and should be kept handy for future use.

The same number should also be on the box received with your trolley. If you need to return your trolley for any reason, please retain the packaging. A proof of purchase must also be kept in case your trolley requires servicing during its warranty period.



Fig 1

Please keep a record of your trolley serial number here for future reference:

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Equipment Overview

1. LCD Touchscreen Display
2. On/Off & Speed Control Button
3. USB Port (on underside of handle)
4. Upper Bag Support
5. Upper Release Latch
6. Pop-up Charging Port
7. CLICK 'N' CONNECT® Battery
8. Battery Tray
9. EASILOCK® Lower Bag Support
10. Front Wheel
11. Front Wheel Alignment Adjusters
12. Rear Wheels
13. Rear Wheel Release Buttons
14. Motor (under Battery Tray)
15. Auto-Open Stand
16. Lower Release Latch
17. Anti-Tip Rear Wheel (Optional)
18. Anti-Tip Rear Wheel Release Button



SAFE USE OF YOUR TROLLEY

Safety cut-out

This Motocaddy trolley is fitted with a timed safety cut-out feature. Once started, the trolley will automatically cut power to the motor after ten minutes to reduce the risk of damage to the trolley. Pressing the 'On/Off' button will restart the trolley.

Safe use of your Trolley

Motocaddy trolleys are designed for the transportation of golf bags and clubs contained within. Using the trolley for any other purpose may cause damage to the trolley and cause harm to the user.

- Do not attempt to transport any other equipment;
- The trolley is not designed for the transportation of people;
- The maximum rated load suitable for this trolley is 20kg;
- Do not use the trolley to assist you when walking up hills;
- Submerging the trolley in water (e.g. a lake) is likely to cause damage to the trolley;
- Do not operate the trolley whilst under the influence of drugs or alcohol;
- This trolley can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities if they have been given supervision or instruction concerning use of the trolley in a safe way and understand the hazards involved. Children shall not play with the trolley. Cleaning and user maintenance shall not be made by children without supervision;

Caring for your Trolley

Although your Motocaddy trolley has been weatherproofed, please follow these simple guidelines to help protect your trolley:

- Do not store your trolley outside;
- Try to minimise exposure to rain as much as possible with an umbrella during heavy rainfall;
- Wipe excess water from the trolley prior to storage;
- Never use a pressure washer to clean your trolley. To prevent water damage, wipe down with a damp cloth;
- Avoid using high pressure air hoses near moving components;
- Avoid exposure to items which may scratch, damage or exert excessive force on the LCD display;

This Motocaddy trolley is designed to require very little maintenance. We do however recommend checking your trolley before each use to ensure:

- There is no build up of excess mud and dirt;
- The rear wheels are securely fitted and turn freely;
- The rear wheel axles are greased and well lubricated;
- The front wheel nut is on tightly and quick release lever is clamped down;
- The front wheel is not clogged up and turns freely;

Only original Motocaddy parts should be used when repairing your trolley.

If you experience an issue with your trolley, please contact our Technical Support team for further assistance.

IMPORTANT BATTERY SAFETY & CARE

Important Battery Safety & Care Information

- Always recharge as soon as possible after finishing your round, regardless of the number of holes played - ideally within 12 hours. Leaving batteries uncharged for extended periods may reduce capacity and could pose a significant safety risk which could result in fire when the battery is charged. Batteries should always be fully charged prior to storing for long periods;
- Never leave batteries charging for longer than necessary - disconnect once the green LED light indicates the battery is fully charged;
- Ensure that only Motocaddy 28V Lithium batteries with Blue/Black connectors are charged with a Motocaddy 28V Lithium battery charger (**LC-2326 - White charger**) and the charger is always connected to an earthed socket outlet;
- This model is also compatible with Motocaddy 28V Lithium batteries with Grey/Black connectors using a Motocaddy 28V Lithium charger (**LC-2323 - Black charger**). See page 17 for further information;
- Batteries must be stored and charged on a dry, non-carpeted surface at a temperature ranging between 10°C and 30°C - charging outside these temperatures may reduce capacity;
- The battery and charger must only be opened and maintained by authorised personnel. Unauthorised opening increases the risk of safety issues and will invalidate your warranty;
- Take care not to drop the battery as this may cause damage to the internal cells which could affect battery performance and safety;
- Regularly check the battery for visible signs of damage. Do not charge or use the battery if any damage is suspected - contact our Technical Support team immediately for advice;
- Use a damp cloth to clean off any dirt, but try to avoid getting the battery too wet (i.e. do not submerge, avoid deep puddles & do not clean your trolley with the battery in the tray);
- **WARNING:** For the purposes of recharging the battery, only use the charger provided with this trolley;

- The battery supplied with this trolley contains battery cells that are non-replaceable;
- Only battery models 28V High Power ULTRA can be used with this trolley;
- Exhausted batteries are to be removed from the trolley and safely disposed of;
- If the trolley is to be stored unused for a long period, the battery should be removed;
- The battery supply terminals must not to be short-circuited;

IMPORTANT - As with any electrical device, it is not recommended to leave batteries charging overnight or for prolonged periods without supervision. Motocaddy Lithium batteries can be fully-charged from empty in less than 5 hours, so wait for the charger light to turn green, switch off at the wall and unplug the battery ready for your next round.

WARNING - If the charger LED light flashes RED and/or GREEN consecutively when connected to the battery, this indicates there is likely to be a fault with the battery or charger. It is important that you disconnect the charger immediately and contact our support team for further assistance. Do not attempt to use the battery or charger as this could pose a significant safety risk which could result in fire.



We are dedicated to protecting the environment and encourage the recycling of Motocaddy products. Exhausted and damaged batteries should be safely disposed of through a local recycling point (where available). Alternatively, please contact our Customer Support team for further information regarding safe and responsible disposal.

CHARGING YOUR LITHIUM BATTERY

Charging your Lithium Battery

The Lithium battery can be left on the trolley or removed for charging. It is possible to charge the battery while the trolley is folded or unfolded. If folded, the charging port will be automatically accessible (fig. 1). If removing the battery for charging, slide the battery release catch to the left (fig. 2) and lift the battery using the grab handles provided (fig. 3). If the charging port is not visible - for example when the trolley is unfolded or battery has been removed - it can be pulled out manually.

1. Plug the Motocaddy 28V Lithium battery charger into an earthed mains power socket
2. The charger light will be GREEN when not attached to a battery to indicate that it is ready to charge
3. Attach the charger cable to the charging port, matching the coloured connections
4. The charger light will provide an indication of charging phase:

 RED - Battery charging  GREEN - Battery fully charged

5. The charging process will take between 3 to 5 hours depending on the depth of discharge. This may take longer for the first few charges
6. Once charging is complete, disconnect the charger from the mains power supply and battery
7. The charging port will need to be pushed into the battery to switch the power on for next use

WARNING - If the charger LED light flashes RED and/or GREEN consecutively when connected to the battery, this indicates there is likely to be a fault with the battery or charger. It is important that you disconnect the charger immediately and contact our support team for further assistance. Do not attempt to use the battery or charger as this could pose a significant safety risk which could result in fire.



Fig 1



Fig 2



Fig 3

Recommendations for hibernation of Lithium Batteries during winter months

If for any reason your Lithium battery is not going to be used for lengthy periods, e.g. 3-months over the winter, the battery should be stored fully charged. Before the battery is used again, recharge it (top it up) prior to use. The battery must not be left for longer than 2-months without charging as this could invalidate your warranty.

We recognise that extended absences are not always planned in advance, however when it is likely that you will not be using your battery for a period of time it is good practice to follow these steps to extend the life of your Lithium battery. Always recharge as soon as possible after finishing your round, regardless of the number of holes played - ideally within 12 hours. Leaving batteries uncharged for extended periods may reduce capacity and could pose a significant safety risk which could result in fire when the battery is charged. Batteries should always be fully charged prior to storing for long periods. Please ensure that the charger is ALWAYS disconnected from the battery after charging.

Battery Management System (BMS)

Motocaddy Lithium batteries are fitted with a comprehensive battery management system (BMS) to protect the battery from excessive abuse, high currents, deep discharge and overcharge. When the battery is delivered there may be no output as the BMS is designed to maximize safety whilst shipping. Please ensure that the battery is fully charged prior to connecting it to your trolley as this will activate the BMS and effectively 'switch-on' the battery. From time to time, at deep discharge or long term storage the BMS may switch-off the battery. A full battery charge will rectify this problem.

Motocaddy golf trolleys are designed to work with the BMS system installed in the Lithium batteries and the battery meter is also synchronised to work in conjunction with the battery. If for any reason the voltage on the battery falls below the low battery warning on the trolley, then the BMS may disable the battery to protect it. Again if this occurs please recharge fully. Please be aware that Lithium batteries tend to 'drop off' quickly at the end of the cycle so it is not advisable to attempt to play excessive holes as the BMS will activate for protection purposes.

ATTACHING THE WHEELS / INVERTING THE WHEELS

Attaching the Wheels

This trolley does not have a specific left and right wheel. To attach the rear wheels, follow these simple steps:

1. Push and hold the quick release button in towards the centre of the wheel
2. Slide the wheel onto the trolley axle as far as it will go (onto the inner groove)
3. Once in position, release the button and pull the wheel outwards slightly to lock
4. An audible 'click' will confirm the wheel is in the correct position

Once correctly attached onto the inner groove, the rear wheels will not rotate freely in either direction.

The outer groove can be used as a "free-wheel" option if you run out of battery power. Simply slide the wheel onto the outer groove and pull the wheel outwards slightly to lock. Once connected, the wheel will spin freely without resistance in both directions.

Inverting the Wheels

The rear wheels can be inverted to reduce the trolley width for transportation and storage.

1. Push and hold the quick release button while sliding the wheel off the axle
2. Flip the wheel over, push and hold the button, then slide onto the axle
3. Release the button and pull the wheel out slightly until it engages with the free wheel groove

It is important the wheels are not pushed on too far. They should not touch the chassis.

Adjusting the Front Wheel Alignment

In the unlikely event that your trolley is not tracking in a straight line, the alignment of the front wheel can be adjusted to rectify the fault. This problem can be caused by a number of factors including a slightly loose bag support or an unevenly packed golf bag. To alter the alignment of the front wheel:

1. Lift the quick release lever positioned on the front wheel housing and loosen the wheel nut (fig. 1)
2. There are two small metal dials on either side of the housing that are used to realign the wheel (fig. 2)
3. If your trolley is veering to the right (when walking behind it), turn the left hand dial clockwise and the right hand dial anti-clockwise
4. If your trolley is veering to the left (when walking behind it), turn the right hand dial clockwise and the left hand dial anti-clockwise
5. Tighten the wheel nut and push down the lever to lock the wheel back into place (fig. 3)

This procedure can be carried out until you are happy the trolley is moving in a straight line. You may only need to adjust one dial at a time.

Instructions based on being in front of the trolley looking at the wheel whilst it is in front of the housing.

Attaching the Anti-Tip Wheel (Optional)

The Anti-Tip wheel is designed to prevent the trolley from tipping backwards on steeper inclines and is included with the M-TECH GPS as an optional attachment. It is not a requirement for safe use.

To attach the wheel, simply pull the grey button on the right side of the anti-tip wheel housing (located underneath rear of trolley) out and slide the anti-tip wheel bar into the housing. There will be a 'click' when the wheel is securely fitted. To remove the wheel, pull the grey button out and slide the attachment out of the housing. The wheel can be removed, or pushed underneath the trolley when not in use.



Fig 1



Fig 2



Fig 3

UNFOLDING

Unfolding the Trolley

We recommend unfolding your trolley once the wheels have been un-inverted and re-attached (see page 10).

1. Lift the upper bag support slightly and release the upper latch (fig. 1)
2. Unfold the handle and re-secure the latch (fig. 2)
3. Release the lower latch (fig. 3)
4. Lift the trolley handle up into position (fig. 4). The front wheel will automatically unfold
5. Re-secure the lower latch and ensure the auto-open stand is folded away (fig. 5)
6. Once unfolded, the charging port must be pushed into the battery to switch the power on

Please be aware that images are for illustrative purposes only and may not reflect actual product.

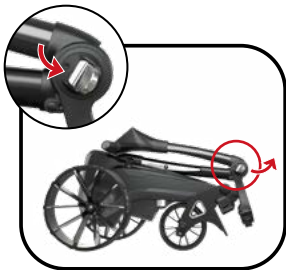


Fig 1

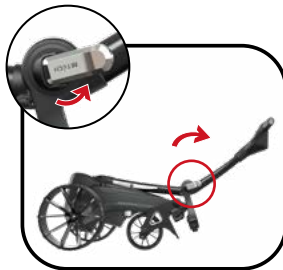


Fig 2



Fig 3



Fig 4



Fig 5

Folding the Trolley

1. Release the lower latch (fig. 1). The auto-open stand will also be activated
2. Fold the frame forward until fully extended (fig. 2). The front wheel will automatically fold underneath
3. Release the upper latch and fold the handle back until the trolley is fully folded (fig. 3)
4. Re-secure both latches. If you wish to stand the trolley upright, leave the auto-open stand out. Remember to ensure the auto-open stand is pushed down if not being used (fig. 4)
5. The wheels can be inverted to reduce the trolley width for transportation and storage (fig. 5). See page 10 for details

Please ensure the auto-open stand is folded away when not in use to prevent damage. If fitted, the anti-tip wheel will need to be removed or retracted underneath the trolley if you are planning on standing the trolley upright for storage.

When the trolley is folded with the battery installed, the power will automatically disconnect and the charging port will become accessible. This is a safety feature to ensure the trolley cannot be switched on when folded during storage or transportation.



Fig 1

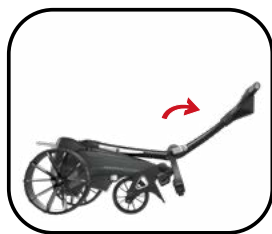


Fig 2



Fig 3



Fig 4



Fig 5

LOWER BAG SUPPORTS

Lower Bag Support with EASILOCK® Bag

All Motocaddy trolleys are fitted with the EASILOCK® bag attachment system. This securely attaches the bag, reduces twisting and removes the need to use a lower bag strap.

1. If using an EASILOCK® compatible bag, please ensure that the supplied pins are fitted to the bag base (fig. 1)
2. If attached, remove the two lower bag support straps by pressing and holding the back of the clip before pulling outwards (fig. 2)
3. Align the cut out on the bag base with the lower bag support platform to align the bag pins with the holes on the trolley (fig. 3)
4. Lower the bag until the pins locate with the two holes. You should hear a positive “CLICK” as the bag locks into position

Lower Bag Support with Non-EASILOCK® Bag

If you are using a non-EASILOCK® golf bag, please do not remove the two lower bag support elastic straps:

1. Position your bag so it is resting on the lower bag support platform and in the cradle of the upper bag support
2. Stretch the lower bag strap around the bag base and loop the rounded bar underneath the bag support hook (fig. 4)

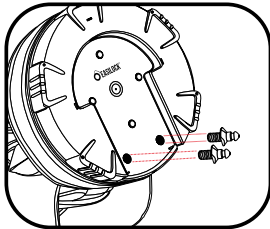


Fig 1

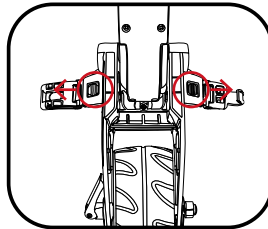


Fig 2

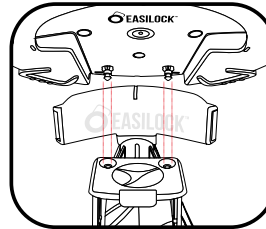


Fig 3

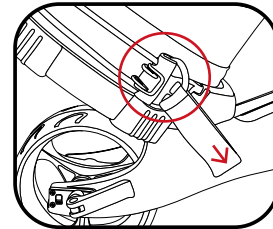


Fig 4

Upper Bag Supports

The upper bag support straps are secured in the same way as the lower straps using the following steps:

1. Stretch the elasticated strap around the bag & loop the rounded bar underneath the hook (fig. 1)
2. Position the two placement straps centrally on your golf bag (fig. 2)

Adjusting the Bag Supports

The bag support straps are manufactured from elasticated material to allow your golf bag to be held tightly in position. The strap should be adjusted to be reasonably tight around the golf bag:

1. Unclip the elasticated straps from the housing by pulling outwards in the direction shown (fig. 3)
2. Move the bar as required to tighten or loosen the strap fitting. Pulling the bar downwards will tighten, upwards will loosen (fig. 4)
3. Ensure that the straps are clipped back into the housing before use (fig. 5)

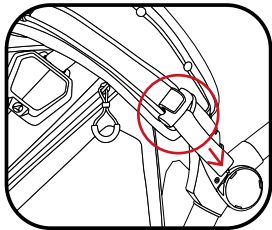


Fig 1

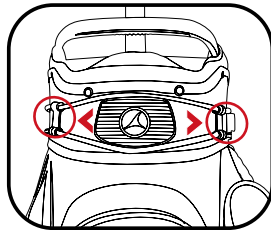


Fig 2

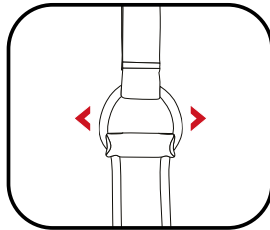


Fig 3

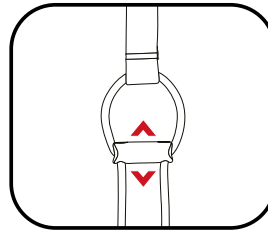


Fig 4

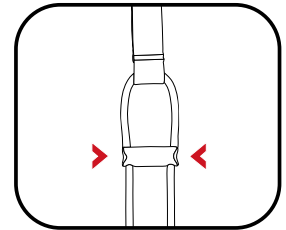


Fig 5

STARTING, STOPPING & CHANGING SPEED

When the battery is initially connected, a Motocaddy logo graphic will be displayed. Please do not attempt to restart the trolley during the booting procedure.

Starting, Stopping & Changing Speed

The 'On/Off' button is used to start and stop the trolley, whilst also controlling the speed, which can be adjusted while the trolley is stationary or in motion. The trolley has 9 speed settings with 1 being the slowest and 9 the fastest.

To increase the speed, rotate the speed dial clockwise, or anti-clockwise to decrease the speed (fig. 1).

To start the trolley, select your speed setting and press the 'On/Off' button. The trolley will smoothly accelerate until it reaches the selected speed and the speed indicator will change from white to green to indicate that the trolley is under power.

To stop the trolley, press the 'On/Off' button again - there is no need to reduce the speed setting. The speed indicator will return to white.

Please be aware that certain moisture, temperature and humidity conditions can result in localised misting within the display screen. This will not affect the trolley functionality, nor cause any damage and will return to normal when adverse conditions subside.



Fig 1

Battery Meter

The trolley includes an on-screen battery meter in the top right corner (fig. 1) which provides an indication of remaining battery capacity.

The battery bar is green when fully-charged. The bar will gradually reduce while turning amber and then red as battery capacity decreases.

The trolley also features a more detailed Battery Status, which can be accessed by tapping the Battery icon from the Home screen or within GPS Mode. This displays the battery capacity including a percentage remaining (fig. 2).

Battery Voltage Setting

The trolley is supplied with a battery featuring a Blue/Black charging socket. The battery indicator has been calibrated for this type of battery. This trolley is also compatible with batteries featuring a Grey/Black charging socket. If you are using this type of battery, the battery indicator will need to be recalibrated:

1. From the Home screen, select the Settings icon and then “Battery Settings”
2. If you are using a battery with a Blue/Black charging port, select 26V
3. If you are using a battery with a Grey/Black charging port, select 28V (fig. 3)
4. Press the back arrow to save your desired settings

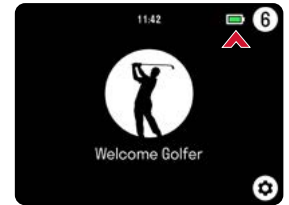


Fig 1 - Home Screen



Fig 2 - Battery Status

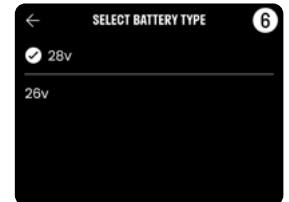


Fig 3 - Battery Settings

USB CHARGING / ADJUSTABLE DISTANCE CONTROL

USB Charging

The trolley features a USB charging port designed to charge USB powered devices during your round. Simply remove the covering cap and plug a USB cable into the charging port located on the underside of the handle. The device will continue charging while the cable is attached and the battery is connected. The rate of charge will be slower than a mains AC charger and similar to plugging the device into a PC. The USB charger takes power from the main trolley battery and continuous charging will reduce the battery capacity between charges. The trolley is designed to disable the USB charging port when the trolley battery capacity reaches a preset level.

Adjustable Distance Control

The trolley features an Adjustable Distance Control (ADC) function that allows you to send the trolley ahead of you from 5 – 50 yards or metres.

1. While stationary, hold down the 'On/Off' button for 2 seconds
2. The ADC settings box will appear and display "0" (fig. 1)
3. Rotate the 'On/Off' button clockwise to increase the distance and anti-clockwise to decrease
4. Press the 'On/Off' button to start the trolley moving

Whilst the trolley is running under ADC mode, the speed and remaining distance will be displayed within the ADC settings box until the desired distance is reached (fig. 2). The trolley can be stopped by pressing the 'On/Off' button once. DHC models will automatically apply the parking brake once the trolley has reached the desired distance and stopped.



Fig 1



Fig 2

The trolley is able to update both firmware and courses via WIFI powered Over-the-Air updates.

Connecting to a WIFI Network

Before attempting an Over-the-Air (OTA) update, the trolley will need to be connected to a WIFI network.

1. From the Home screen, select the Settings icon and then "WIFI"
2. Select the required network from the list (fig. 1)
3. Enter the WIFI password (tap the eye icon to view password) and select "Next" (fig. 2)
4. Once connected select the back arrow in the top left

Firmware Updates (OTA)

It is necessary to check for firmware updates before using the trolley for the first time.

To check current software version and install updates:

1. From the Home screen select the Settings icon and then "Firmware Update"
2. You will be asked whether you want to check for updates. Select "Yes"
3. The trolley will search and indicate whether a newer firmware version is available
4. If there is newer firmware, you will see an option to select "DOWNLOAD AND INSTALL" (fig. 3)
5. Select "DOWNLOAD AND INSTALL" to continue and install the update
6. During installation, the trolley will restart and show the Home screen when completed

The OTA process can take a few minutes to complete. During installation, the trolley may automatically reboot multiple times and the screen will go blank. Do not attempt to restart the trolley during the booting procedure. When the Home screen is displayed, the OTA is complete. It may be necessary to unpair your mobile device and re-pair after performing an OTA.



Fig 1 - WIFI Network List



Fig 2 - WIFI Password Entry



Fig 3 - Check for Updates

Course Updates (OTA)

The trolley is pre-loaded with over 40,000 worldwide courses. To check for an updated course map, the trolley will need to be connected to a WIFI network (see page 19):

1. From the Home screen select the Settings icon and then "Update Course"
2. Enter the name of the course (you do not need to enter the full name) and select "Next" (fig. 1)
3. The trolley will then display a list of courses which meet the search criteria (fig. 2)
4. Select the course that you want to update from the search results
5. The course will then be updated and "Updating Course" will be displayed
6. Once complete, the trolley will confirm that the course has been successfully updated (fig. 3)
7. Select "OK" to exit

Please submit requests for mapping updates or new course mapping using the 'Report Mapping Issue' option within the Motocaddy app support menu.

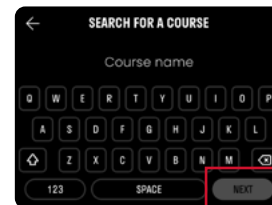


Fig 1 - Course Search

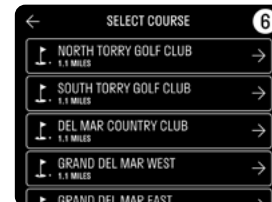


Fig 2 - Course Selection

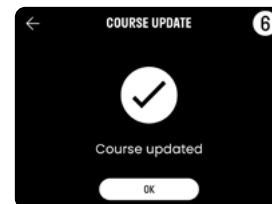


Fig 3 - Course Updated

Activating GPS Mode

In order to access GPS Mode features on your trolley, you will first need to activate your account.

1. Select the "Activate" button on the Home Screen (fig. 1)
2. Press activate on the QR screen
3. Connect to WIFI. WIFI connection requires a secure, password protected WIFI (fig. 2)
4. Select your WIFI and enter the password
5. When connected, you will be required to check for additional updates, carry out the required updates to proceed
6. Following your updates, enter your email (fig. 3). If you already have an account made with another trolley or the Motocaddy GPS app, you will be asked to sign in and enter your password
7. If you do not have an account, enter your first and last name
8. Choose your region, you may need to scroll if you're based in North or South America (fig. 4)
9. Select your country & enter your phone number (fig. 5)
10. Create and confirm your password
11. Following acknowledgement of the privacy policy and terms and conditions, submit your activation (fig. 6)
12. Activation complete



Fig 1



Fig 2



Fig 3



Fig 4



Fig 5

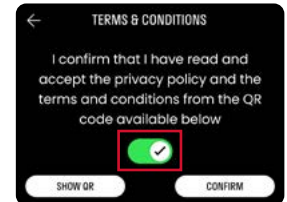


Fig 6

GPS MODE INTRODUCTION

Introduction to GPS Mode

The trolley is pre-loaded with 40,000+ worldwide golf courses and includes full hole GPS mapping, alongside front, middle and back of green distances, plus a dynamic green which reflects the shape of the green being played. It also includes a variety of other information, including hole information, hazard distances, performance tracking, hole flyover, and shot distance measurement.

IMPORTANT : Distance Measurement Device (DMD) features are legal to use when local USGA and R&A rule 4.3 is in effect. Always check local and competition rules regarding the use of DMD and Push Notifications prior to commencing play.

Using GPS Mode

Once activation has been completed, it is easy to start a round in GPS Mode:

1. From the Home screen tap the Golfer icon (fig. 1)
2. The trolley will connect to satellites and acquire an accurate GPS location
3. A list of local courses will be displayed, with the nearest at the top (fig. 2)
4. Select the course you wish to play
5. Select the tee box that you will be playing from (fig. 3)

The first hole will be loaded ready for play. It is possible to advance to an alternative hole if required

The first time searching for a course can take up to 5 minutes due to GPS calibration.

For full information and step-by-step instructions, including customisation of GPS Mode shortcut icons, clock and round/lost ball timers, please visit www.motocaddy.com/support/m-tech.

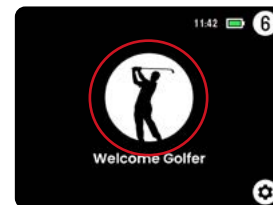


Fig 1 - Home Screen

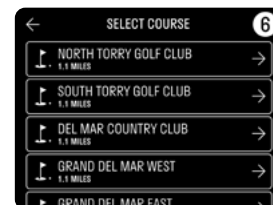


Fig 2 - Course Selection

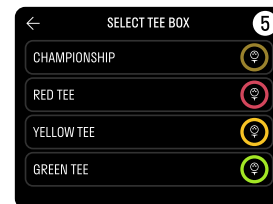


Fig 3 - Tee Box Selection

Language Settings

The trolley can be used in a number of different languages:

1. Following activation, from the Home screen select the Settings icon and then "Languages"
2. Select preferred language and then "Close" to confirm

Competition Mode

It is possible to temporarily disable GPS using Competition Mode should competition rules dictate. It is recommended that you always check competition rules before using your trolley with GPS enabled. To Enable/Disable Competition Mode:

1. From the Home screen select the Settings icon and then "Competition Mode"
2. Select "On" (to enable) or "Off" (to disable) & select "Close" to exit

When Competition Mode is enabled, the "Play Golf" option will be disabled and the Home screen will display "Competition Mode Enabled" (fig. 1).

Demo Mode

The trolley features Demo Mode (fig. 2) to allow feature demonstration when a GPS signal is not available.

To enable Demo Mode, select the Settings icon from the Home screen and then "Demo Mode". Demo Mode can be toggled "On" and "Off". Once enabled, GPS Mode will display a list of demo courses.

It is important to disable Demo Mode before attempting to play a round of golf.

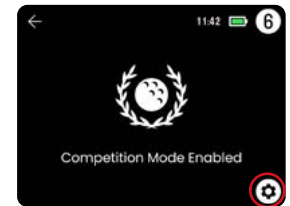


Fig 1 - Competition Mode

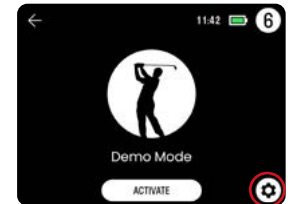


Fig 2 - Demo Mode

ENABLING BLUETOOTH / PAIRING YOUR PHONE

Enabling Bluetooth

In order to pair your phone to your trolley, you will need to ensure that Bluetooth is enabled on the trolley:

1. From the Home screen select the Settings icon and then "Bluetooth"
2. If Bluetooth is off, select "Yes" to turn it on

Pairing your Phone

To pair with a compatible smartphone, ensure Bluetooth is enabled on both devices (see above) and then:

1. Open the Motocaddy app on your phone and select "Pair Device" button
2. Select the correct trolley model from the list and select "Next"
3. Further instructions will be displayed. When ready, select "Pair Device"
4. Once the trolley and phone have found each other, both devices will display a six digit code. If these codes match, select "Pair" on both devices (fig. 1)
5. Both the trolley and phone will confirm that pairing has been successful (fig. 2)
6. Select "My Device" on the phone for further settings and "Close" on the trolley screen to continue

The Motocaddy app can be closed once pairing is complete or used as an additional GPS device. Once pairing is complete, it is not necessary to open the Motocaddy app to display notifications on the trolley screen, however the app can be used to control notification settings or unpair your phone.

During initial startup, the Bluetooth on your trolley will take around 60 seconds to initialise and will automatically reconnect to your phone when in range. Bluetooth can be disabled if required.

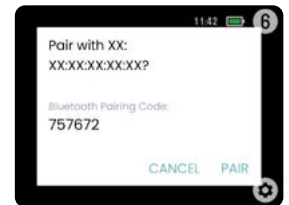


Fig 1 - Bluetooth Pairing Code

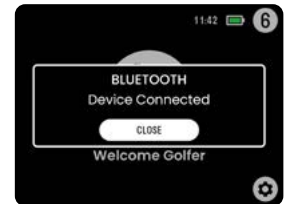


Fig 2 - Pairing Successful

Introduction to Smartphone Notifications

The trolley can be linked to the Motocaddy GPS app via a Bluetooth® connection on any compatible smartphone; allowing the trolley's LCD screen to receive optional push notifications for messages, email, calls and other compatible apps (fig. 1). The trolley can be used with or without notifications enabled.

It is possible to pre-set which notification types are displayed on the trolley screen using the device 'Settings' menu within the Motocaddy app. There are also specific push notification settings within your phone that need to be enabled for the notifications to be displayed on your trolley.

For full information and step-by-step instructions, visit www.motocaddy.com/support/m-tech.

Downhill Control (DHC)

The letters DHC stand for 'Downhill Control' and mean that your trolley will automatically maintain a controlled speed whilst travelling down hills. Whenever you are looking to move the trolley, even if just to reposition it ready to use, always put it on a low speed setting to make it easier to steer.

Electronic Parking Brake (DHC)

DHC models are fitted with an Electronic Parking Brake. To use this feature, the trolley must be in a stationary position. The parking brake is initiated by rotating the speed dial down to 1 and then rotating one click further. Once activated, the Parking Brake indicator will be displayed (fig. 2) and the speed indicator number will be replaced with a letter "P". The speed setting can be adjusted whilst the parking brake is activated by turning the speed dial. To release the parking brake, press the 'On/Off' button to start the trolley.



Fig 1 - Smartphone Notification



Fig 2 - Parking Brake Initiated

IC STATEMENT

IC Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference
- (2) This device must accept any interference, including interference that may cause undesired operation of the device

l'appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux CNR exempts de licence d'Innovation, Sciences et Développement économique Canada. L'exploitation est soumise aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. The user manual for local area network devices shall contain instructions related to the restrictions mentioned in the above sections, namely that:
 - (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems
 - (ii) the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall comply with the e.i.r.p. limit; and
 - (iii) the maximum antenna gain permitted for devices in the band 5725-5825 MHz shall comply with the e.i.r.p. limits specified for point-to-point and non point-to-point operation as appropriate
- (i) Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux
- (ii) le gain d'antenne maximal autorisé pour les appareils dans les bandes 5250-5350 MHz et 5470-5725 MHz doivent respecter le pire limiter; et
- (iii) le gain d'antenne maximal autorisé pour les appareils dans la bande 5725-5825 MHz doivent respecter le pire limites spécifiées pour le point-à-point et l'exploitation non point à point, le cas échéant.

Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

IC Radiation Exposure Statement:

Cet équipement a été mis à l'essai et respecte les limites applicables pour l'exposition aux radiofréquences (RF). La limite d'IC SAR pour le SAR des extrémités est de 4,0 W/kg (10 g) et le SAR corporel est de 1,6 W/kg (1 g). La valeur SAR la plus élevée déclarée en vertu de cette norme lors de la certification du produit lorsqu'il est correctement porté par un membre (0 mm) à l'extrémité SAR est de 0.98W / kg, et près du corps (0 mm) SAR est de 1.30W / kg.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment has been tested and meets applicable limits for radio frequency (RF) exposure. The FCC SAR limit for extremity SAR is 4.0W/kg (10g) and Body SAR is 1.6W/kg (1g). The highest SAR value reported under this standard during product certification when properly Limb worn (0mm) on the extremity SAR is 0.90 W/kg, and close to body(0mm) SAR is 1.10W/kg.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without RF striction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital, pursuant to Part 15 or the FCC Rules.


These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- (1) Reorient or relocate the receiving antenna
- (2) Increase the separation between the equipment and receiver
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- (4) Consult the dealer or an experienced radio/TV technician for help





 Motocaddy Ltd,
Units 15 - 18 Stansted Distribution Centre,
Start Hill, Great Hallingbury, Hertfordshire, CM22 7DG,
United Kingdom

 +44 (0)1279 712 370

 info@motocaddy.com

 www.motocaddy.com

MC.26.59.001

Auto-Disconnect Patent (GB) - GB2604429 | Auto-Disconnect Patent (GB) - GB2606985 | EASILOCK® Patent (GB) - GB2519073 | USB Charging Port Patent (GB) - GB2473845 |
USB Charging Port Patent (AUSTRALIA) - 2010224448

Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android and Google Play are trademarks of Google Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Motocaddy is under license. Other trademarks and trade names are those of their respective owners.