




2015 S-SERIES TROLLEY SEAT

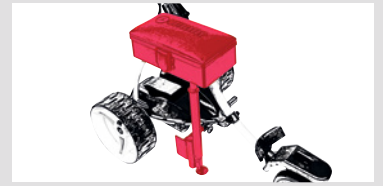


Tools Required
Allen key (supplied)



1

Insert the vertical tube into the seat. Align the hole in the tube with the hole in the seat (fig. 1)

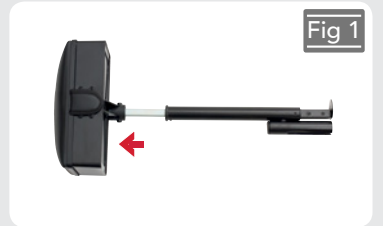

2

Fit the nut into the hole and thread the bolt through as shown and tighten with Allen key supplied (fig. 2)



3

Slide the horizontal tube into the housing underneath the right side of the trolley battery tray (fig. 3)



4

Secure with the screw ensuring it is not over-tightened (fig. 4)



5

Insert the seat onto the horizontal bar as shown, aligning the slots in both parts (fig. 5)



6

The seat should now be secure and ready to use (fig. 6)

